

Prime Line

April, 2006

Outgoing Calls

14-05-01 Trunk Groups

Assign the trunks you wish to access when going off hook to a Trunk Group.

14-06-01 Trunk Group Routing

Assign the Trunk Group(s) which contains the trunks you wish to access when going off-hook to a Trunk Route Table.

21-02-01 Trunk Group Routing for Extensions

Assign the extension(s) you wish to assign Prime Line for, to the Trunk Route Table assigned in PRG 14-06-01.

15-01-02 Outgoing Trunk Line Preference

0 = Disabled

1 = Enabled

Use this option to set the extension's outgoing Trunk Line Preference. If enabled (1), the extension user gets trunk dial tone when they lift the handset. If disabled (0), the extension user gets intercom dial tone when they lift the handset. NOTE: This program has no effect when going off-hook by pressing the [SPEAKER] key.

Incoming Calls

15-02-10 Ringing Line Preference for Trunk Calls

0 = OFF (Idle Trunk)

1 = ON (Ringing Trunk)

This program decides what happens when you have a Prime Trunk Line ringing at your extension and go off-hook. If disabled (0), you will not answer the ringing trunk line and instead grab dial tone on an idle Prime Trunk line. If enabled (1), you will answer the ringing trunk line.

22-01-01 Incoming Call Priority

0 = Intercom Call Priority

1 = Trunk Call Priority

This program decides what happens when you have a Prim Trunk line ringing at your extension and an Intercom call ringing at your extension at the same time and go off-hook. If set to (0), you will answer the Intercom call. If set to (1), you will answer the Prime Trunk line.