

# Hot Line / Ringdown Extension

April, 2006

---

## **20-06-01      Class of Service for Extensions**

*Assign extensions to a Class of Service.*

## **20-08-09      Hotline / Extension Ringdown**

0 = Disable  
1 = Enable

*This program allows or denies the ability for an extension to use Ringdown Extension (Hotline). This program is assigned on a Class of Service basis.*

## **21-01-09      Hotline Call Start Timer**

0~64800 (Seconds)

*This timer controls the amount of time the Ringdown Extension (Hotline) will be delayed when the station user goes off-hook. Assign this program as (0 Seconds) for immediate Ringdown (Hotline).*

## **21-11-01      Extension Ringdown (Hotline) Assignments**

*This program works exactly like MB 4-23 did in the previous IPK. Program the Ringdown (Hotline) source and destination (target) number which can be up to 24 digits (512 Hotline assignments). Remember to include the trunk access code (usually 9) in front of the number when dialing outside numbers. When programming Speed Dial – System numbers as the destination, the entry should be [#2 (assigned in PRG 11-12-10) + bin number]. When programming Speed Dial – Group numbers as the destination, the entry should be [#4 (assigned in PRG 11-12-11) + bin number]. When programming Speed Dial – Personal/Station as the destination, the entry should be [#7 (assigned in PRG 11-12-40) + bin number].*

*This program works when going off-hook by either the handset or pressing the [SPEAKER] button.*